

ASSEMBLY INSTRUCTIONS

1. Place rack sides on a flat surface
2. Link the sides using two bottom (heavier) rods with the four castor bolts
3. Using the remaining rods link the top of the sides using the small bolts each with a fixing clamp
4. **ASPR20-C** only - use the last rods to link the middle of the sides using small bolts and fixing clamps
5. Load fully with pans ready for use



ASPR10-C



ASPR20-C

ACE ALUMINIUM MOBILE PAN RACK



OCTOBER 2012

ASSEMBLY INSTRUCTIONS

CARTON CONTENTS

- 2 X ANGLE SIDES WITH CASTORS
- 2 X BOTTOM RODS
- 2 X TOP RODS
- 2 X MIDDLE RODS
(**ASPR20-C ONLY**)
- 4 X CASTOR BOLTS
- 4 X ROD FIXING BOLTS AND CLAMPS (**ASPR10-C**)
- 8 X ROD FIXING BOLTS AND CLAMPS (**ASPR20-C**)
- 10 X FULL SIZE PANS (**ASPR10-C**)
- 20 X FULL SIZE PANS (**ASPR20-C**)



ACE ALUMINIUM MOBILE
PAN RACK




TOP RODS
FIXING CLAMPS
BOLTS

ANGLE
SIDES


MIDDLE RODS
FIXING CLAMPS
BOLTS

BOTTOM RODS
BOLTS

CASTORS

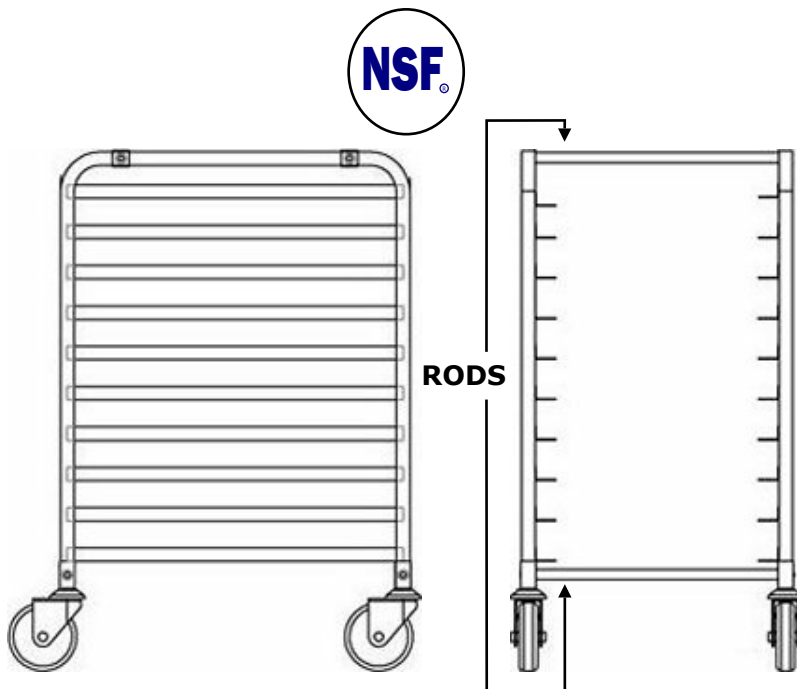

ASPR10-C

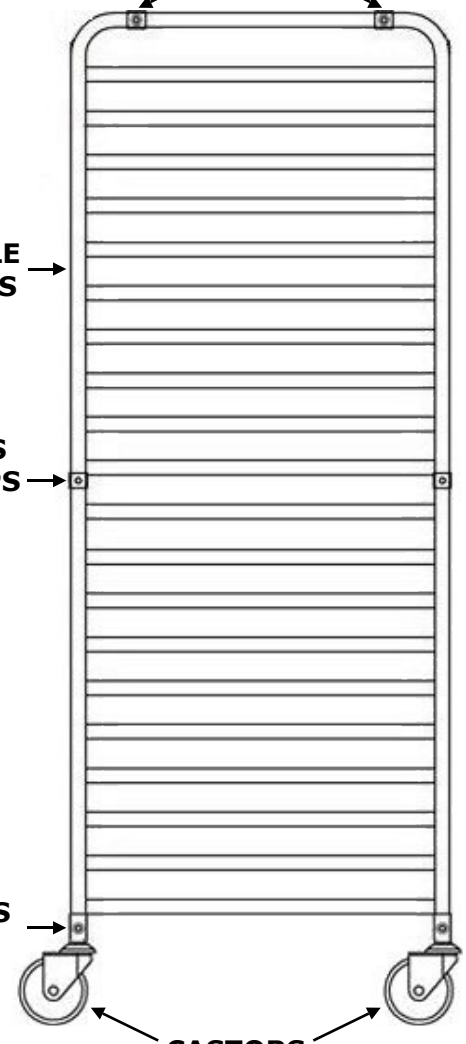

ASPR20-C