


BUILT STRONG - BUILT TOUGH

STAINLESS STEEL EQUIPMENT



WWW.ACE-UK.COM

HEAVY DUTY
INDUSTRIAL
COMMERCIAL
MEDICAL
VETERINARY
RETAIL
WHOLESALE

WASH HAND BASIN - SSIB INSTALLATION INSTRUCTIONS



CARTON CONTENTS



- 1 X WASH HAND BASIN
- FITTED **ITW** INDUCTION TAP
- 1 X GOOSE NECK SPOUT
- 1 X WASTE FITTINGS
- 1 X WALL BRACKET
- 1 X 600mm (24") WATER HOSE
- 1 X CONTROL BOX WITH BATTERIES

ACE STAINLESS STEEL
WASH HAND BASINS



SSIB HAND SINK - ITW INDUCTION TAP
MV100 MIXER VALVE

WALL BRACKET

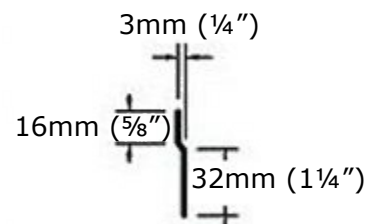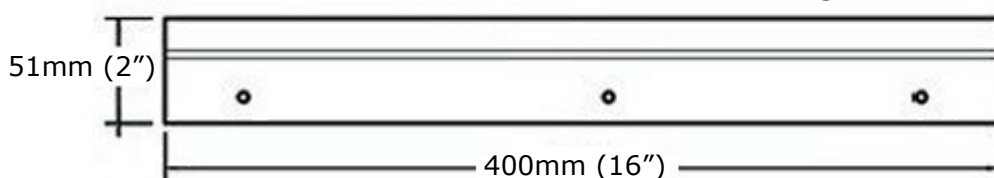


JANUARY 2016

**AMERICAN
CATERING
EQUIPMENT**

AMERICAN CATERING EQUIPMENT (UK) LIMITED
5 CHANTRY COURT
SOVEREIGN WAY
CHESTER WEST
CHESTER CH1 4QN
UNITED KINGDOM
TELEPHONE: 44 (0) 1244 381281
FAX: 44 (0) 1244 381700
OFFICE: FSE@ACE-UK.COM
PARTS: PARTS@ACE-UK.COM
WEBSITE: WWW.ACE-UK.COM



WASH HAND BASIN - SSIB INSTALLATION INSTRUCTIONS

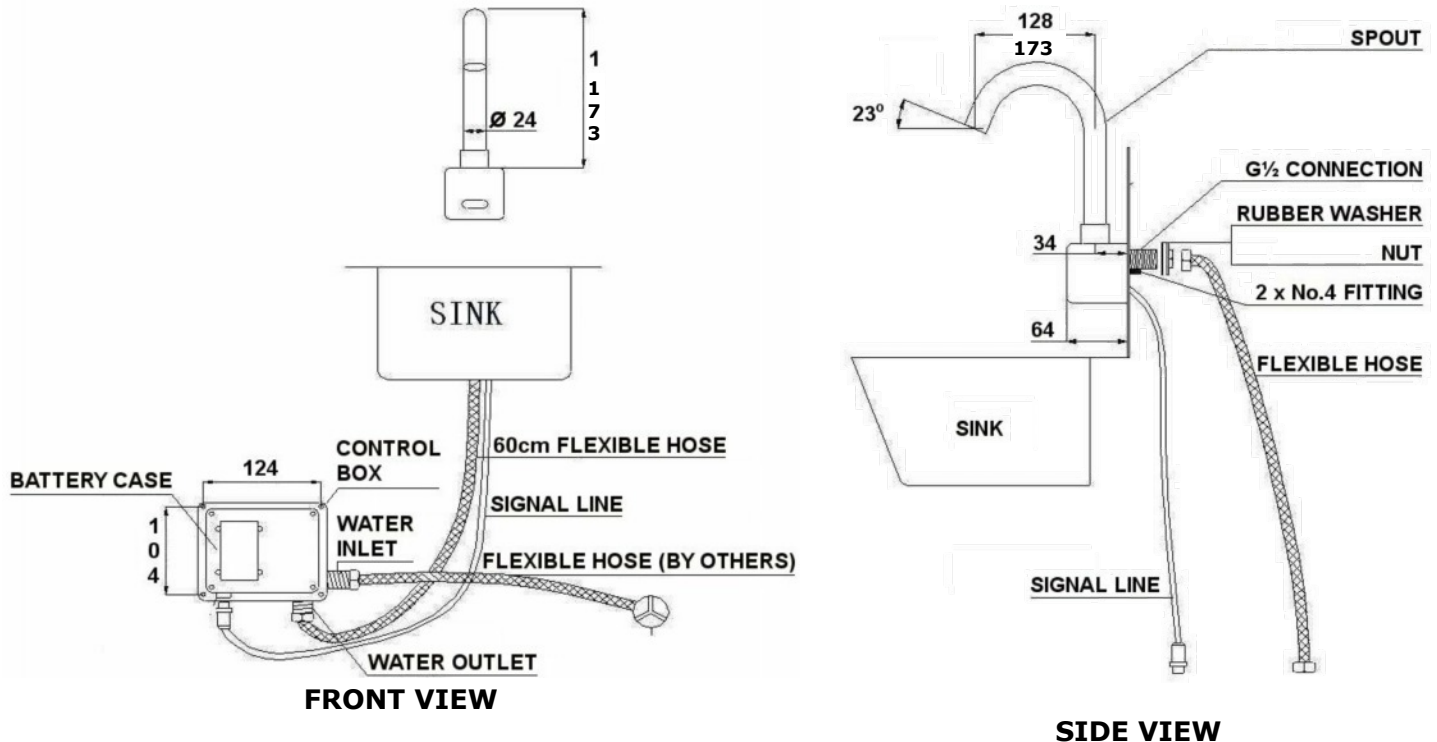

ENSURE ALL FITTINGS AND CONNECTIONS ARE FREE OF ANY CONTAMINATION

1. Fit wall bracket to desired position
2. Fit gooseneck spout to tap
3. Fit waste outlet
4. Fit 600mm (24") water hose to tap
5. Hang wash hand basin on wall bracket
6. Position and fit control box - **DO NOT FIT UPSIDE DOWN** (see drawing above)
7. Connect water hose to control box outlet
8. Connect water supply to control box inlet (use **MV100** mixer valve for dual supply)
9. Connect signal line to control box. Wait 60 seconds and test - hand in front of sensor "on", remove hand "off"

ATTENTION MAINTENANCE OF WATER FILTER

The "WATER IN" has a water filter - it may be necessary to remove and flush out if tap delivery becomes reduced

1. Shut off water supply
2. Disconnect signal line
3. Remove control box cover
4. Remove 2 screws below "WATER OUT" connection
5. Remove 2 screws holding "WATER IN" connection
6. Remove inlet filter and flush thoroughly
7. Reassemble and reconnect all components, turn on water and test

