


BUILT STRONG - BUILT TOUGH

STAINLESS STEEL EQUIPMENT



WWW.ACE-UK.COM

HEAVY DUTY
INDUSTRIAL
COMMERCIAL
MEDICAL
VETERINARY
RETAIL
WHOLESALE

FOUR TIER RACKS
SSR - STAINLESS STEEL
CMR - CHROME PLATED

ASSEMBLY INSTRUCTIONS

CARTON CONTENTS

- 4 X SHELF
- 16 X PAIRS OF SPLIT SLEEVES
- 4 X ADJUSTABLE FEET OR CASTORS
- 4 X UPRIGHT POSTS (SEPARATE CARTON)



JANUARY 2016


**AMERICAN
CATERING
EQUIPMENT**

AMERICAN CATERING EQUIPMENT (UK) LIMITED
5 CHANTRY COURT
SOVEREIGN WAY
CHESTER WEST
CHESTER CH1 4QN
UNITED KINGDOM
TELEPHONE: 44 (0) 1244 381281
FAX: 44 (0) 1244 381700
OFFICE: FSE@ACE-UK.COM
PARTS: PARTS@ACE-UK.COM
WEBSITE: WWW.ACE-UK.COM



BUILT STRONG - BUILT TOUGH

STAINLESS STEEL EQUIPMENT






WWW.ACE-UK.COM

HEAVY DUTY
INDUSTRIAL
COMMERCIAL
MEDICAL
VETERINARY
RETAIL
WHOLESALE

FOUR TIER RACKS SSR - STAINLESS STEEL CMR - CHROME PLATED

ASSEMBLY INSTRUCTIONS

(TWO PEOPLE RECOMMENDED)

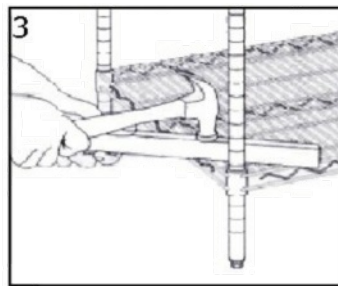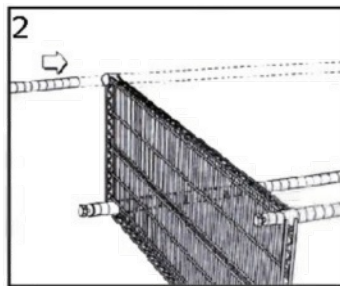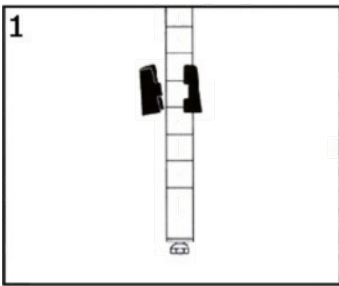

1. Fixing bottom shelf

Attach wedges/sleeves to lowest desired level position on each upright post

Bottom shelf on mobile units should ALWAYS be fixed into groove number 5 from the base of the post

2. Place bottom shelf on edge and insert posts top first through underside of shelf

3. With all posts in position place rack upright
Seat bottom shelf down with mallet or similar
AVOID EXCESSIVE FORCE

4. Repeat shelf fixing procedure placing remaining shelves in desired positions
Ensure all shelves are well seated to make rack rigid
AVOID EXCESSIVE FORCE

5. Place rack on side to fit optional castors

6. Place rack upright
Check shelves are seated securely and ensure rack is rigid - tap down shelf corners where necessary
AVOID EXCESSIVE FORCE

**AMERICAN
CATERING
EQUIPMENT**

AMERICAN CATERING EQUIPMENT (UK) LIMITED
5 CHANTRY COURT
SOVEREIGN WAY
CHESTER WEST
CHESTER CH1 4QN
UNITED KINGDOM
TELEPHONE: 44 (0) 1244 381281
FAX: 44 (0) 1244 381700
OFFICE: FSE@ACE-UK.COM
PARTS: PARTS@ACE-UK.COM
WEBSITE: WWW.ACE-UK.COM

