


BUILT STRONG - BUILT TOUGH

STAINLESS STEEL EQUIPMENT



WWW.ACE-UK.COM

HEAVY DUTY
INDUSTRIAL
COMMERCIAL
MEDICAL
VETERINARY
RETAIL
WHOLESALE

GENERAL PURPOSE TROLLEY - SSGT

ASSEMBLY INSTRUCTIONS

CARTON CONTENTS

- SSGT324-2 2 X TRAYS
- OR
- SSGT324-3 3 X TRAYS
- OR
- SSGT324-4 4 X TRAYS

ALL TROLLEYS

- 4 X UPRIGHT CORNER POSTS
- OR
- 2 X END FRAME
- 4 X CASTORS
- 1 X BAG SET SCREWS WITH ALLEN KEY

SSGT324-2N



ACE STAINLESS STEEL TROLLEYS



SSGT324-3S



END FRAME


CORNER POSTS

TRAYS

CASTOR WITH BRAKE

CASTOR WITHOUT BRAKE

SSGT324-4H

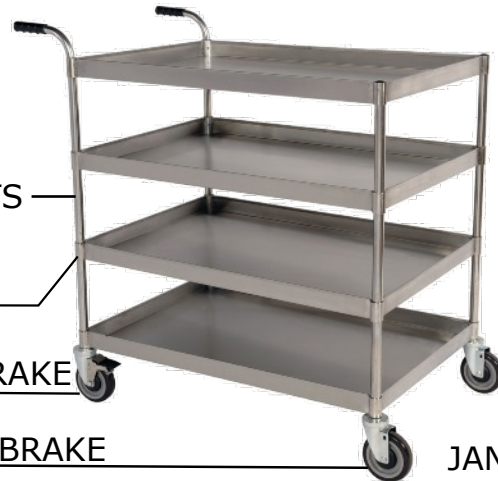

JANUARY 2016


**AMERICAN
CATERING
EQUIPMENT**

AMERICAN CATERING EQUIPMENT (UK) LIMITED
5 CHANTRY COURT
SOVEREIGN WAY
CHESTER WEST
CHESTER CH1 4QN
UNITED KINGDOM
TELEPHONE: 44 (0) 1244 381281
FAX: 44 (0) 1244 381700
OFFICE: FSE@ACE-UK.COM
PARTS: PARTS@ACE-UK.COM
WEBSITE: WWW.ACE-UK.COM



BUILT STRONG - BUILT TOUGH

STAINLESS STEEL EQUIPMENT



WWW.ACE-UK.COM

HEAVY DUTY
INDUSTRIAL
COMMERCIAL
MEDICAL
VETERINARY
RETAIL
WHOLESALE

GENERAL PURPOSE TROLLEY - SSGT

ASSEMBLY INSTRUCTIONS

- 1 Assemble the trolley top tray first
- 2 Insert corner posts one thru four into top tray and secure with set screws provided
DO NOT OVER TIGHTEN
- 3 Follow same procedure with remaining trays two, three and four according to model
- 4 Place trolley upside down on flat surface, finger tighten castors to enable grip on corner post - tighten with a spanner
- 5 Place trolley on its castors. Check all trays are suitably positioned and level adjust if required by slackening set screw
- 6 Ensure all set screws are secure
DO NOT OVER TIGHTEN
- 7 Remove protective coverings
DO NOT USE SHARP IMPLEMENTS



ACE STAINLESS STEEL TROLLEYS

SSGT GENERAL PURPOSE TROLLEY - SUGGESTED TRAY POSITIONS

SSGT324-2N



SSGT324-3N



SSGT324-4H



ALL MEASUREMENTS MM

**AMERICAN
CATERING
EQUIPMENT**

AMERICAN CATERING EQUIPMENT (UK) LIMITED
 5 CHANTRY COURT
 SOVEREIGN WAY
 CHESTER WEST
 CHESTER CH1 4QN
 UNITED KINGDOM

TELEPHONE: 44 (0) 1244 381281
 FAX: 44 (0) 1244 381700
 OFFICE: FSE@ACE-UK.COM
 PARTS: PARTS@ACE-UK.COM
 WEBSITE: WWW.ACE-UK.COM

